Updating the TI-Innovator Hub to the latest version of the sketch ("firmware")

For TI-84 Plus CE and TI-Nspire CX

June 5, 2021

Step 1: Check your TI-Innovator Hub sketch version


TI-84 Plus CE and CE Python

Connect your TI-Innovator Hub to your calculator with a unit-to-unit cable.

As the Hub powers up you will see a colored light for a few seconds. **Magenta** is the color for the Version 1.4 Sketch. **Orange** is the color for the Version 1.5 Sketch (March 2021).



After connecting the TI-Innovator Hub with a unit-to-unit cable, you can also check the Hub sketch version by pressing the [apps] key followed by selecting the Hub app from the menu. The sketch version will be displayed

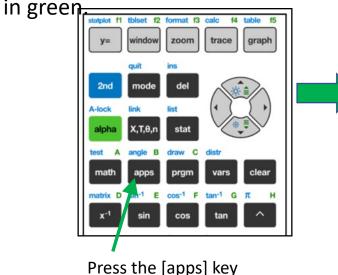

NORMAL	FLOAT	AUTO	REAL	DEGREE	MP	
APPL1						
1:Fir						
2:Cał						
3:Ce]		≥t				
4:Cor						
5:Eas		a				
6:Huł						
7:Ine						
8:Per						
94P19	JSmIt	.2				

Select 6: Hub from the Apps menu



The Sketch version is displayed.

Step 1: Check your TI-Innovator Hub sketch version

Connect your TI-Innovator Hub to your calculator with a unit-to-unit cable.

As the Hub powers up you will see a colored light for a few seconds. **Magenta** is the color for the Version 1.4 Sketch. **Orange** is the color for the Version 1.5 Sketch (March 2021).

分


Scratchpad

A Calculate


B Graph




After connecting the TI-Innovator Hub with a unit-to-unit cable, you can also check the Hub sketch version by pressing the [Home/on] key followed by 5:Settings then 7:selecting the Hub app from the menu. The sketch version will be displayed in the dialogue box.

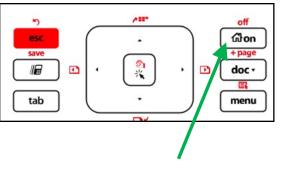

Press the [Home/on] key

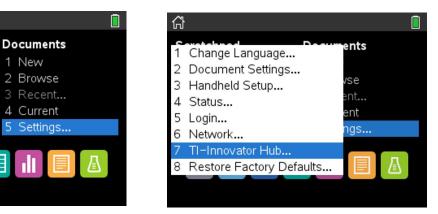

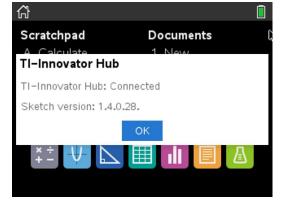


Select 5: Settings...

Select 7: TI-Innovator Hub...

The Sketch version is displayed.

Step 2: Download the TI-Innovator Updater Software

Download the latest version of the TI-Innovator Updater Software (Version 1.0) at this <u>link</u>. Note: Windows users download .EXE file for individual installation.

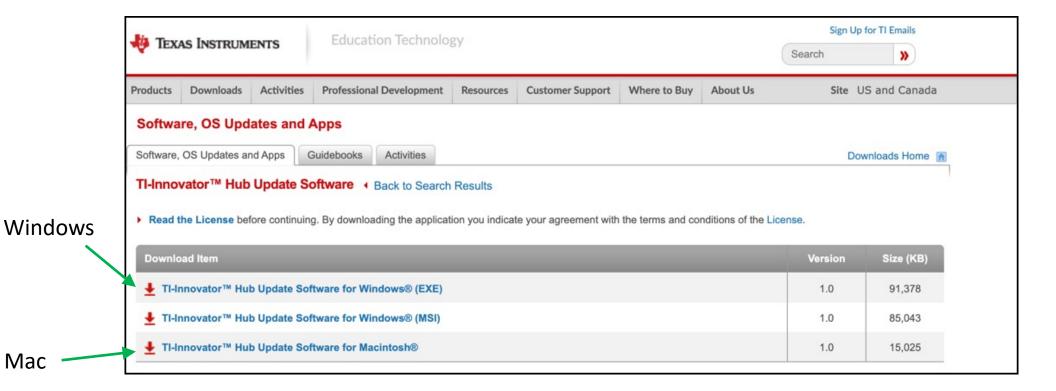

Find and open (or double click) the downloaded file to install.



Step 3: Download the latest TI-Innovator Hub sketch

Download the latest version of the TI-Innovator Sketch* (Version 1.5) at this <u>link</u>. You will install the Sketch file on the TI-Innovator Hub with the Updater Software.

*The "Sketch" is the name used for the TI-Innovator Hub operating system.


	texas Instruments		ENTS	Education Technology					Sign Up Search	for TI Emails
	Products	Downloads	Activities	Professional Development	Resources	Customer Support	Where to Buy	About Us	Site U	IS and Canada
	Software, OS Updates and Apps									
	Software,	OS Updates a	nd Apps	Guidebooks Activities					Dov	wnloads Home 👔
	TI-Innovator™ Sketch									
Download	• Read the License before continuing. By downloading the application you indicate your agreement with the terms and conditions of the License.									
Sketch	Download Item				PDF	eGuide	Version	Size (KB)		
	🛨 тн	nnovator™ Sk	etch						1.5	4,538
	Guidebooks									
	L TI-Innovator ™ Hub mit TI LaunchPad ™ Board Konfiguration (Deutsch)				2	View	1.4	3,773		
	TI-Innovator™ Hub with TI LaunchPad™ Board Setup Guide				₽.	View	1.4	8,742		
	🛨 Tl-Innovator™ Hub con placa Tl LaunchPad ™ Guía de Preparación (Español)				2	View	1.4	4,373		
	Ł Hub TI-Innovator ™ avec guide d'installation de la carte TI LaunchPad ™ (French)				2	View	1.4	8,737		
	🛨 Hut	± Hub Ti-Innovator™ con scheda Ti LaunchPad™ Guida alla configurazione (Italy)				2		1.4	8,733	
	± TH	nnovator ™ Hເ	ıb met TI Laı	LaunchPad ™ -kaart Installatiehandleiding (Nederlands)			₽.	View	1.4	3,944
	🛨 TI-II	nnovator™ Se	tup Guide (P	ortuguês)			7	View	1.4	3,947

Typically, the sketch file will be saved to the downloads folder or to the desktop. The location depends on your browser settings.

Step 4: Open the TI-Innovator Hub Updater Software

Follow the directions in the dialog box.

Step 4A: Plug a USB Micro Cable into the PWR port of the Hub. Note: The Micro cable has a smaller profile than the USB Mini cable that plugs into the Hub Data port or into the calculator.

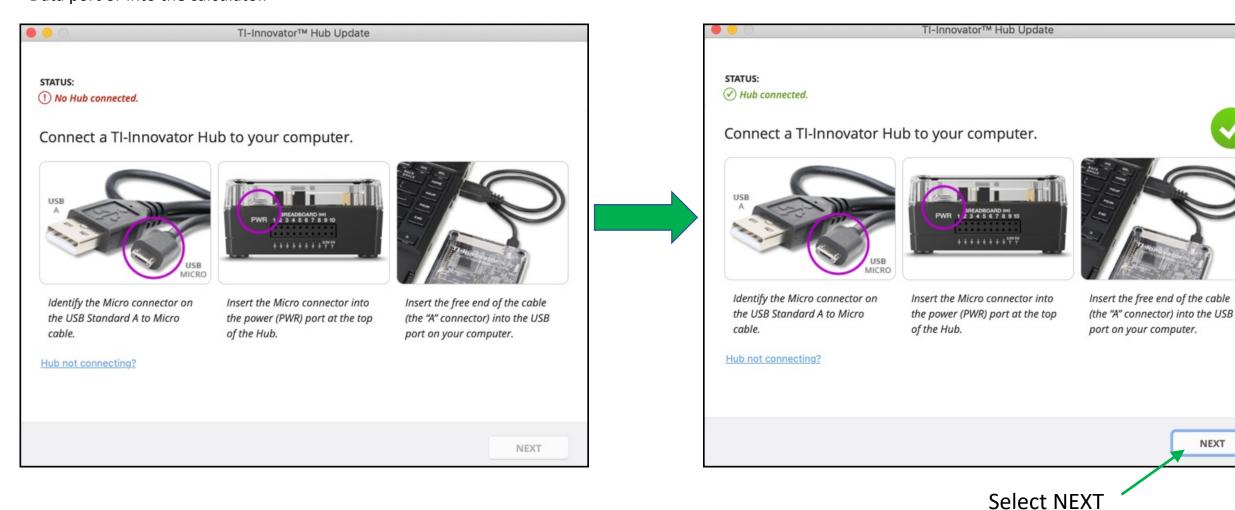




NEXT

Step 4: Open the TI-Innovator Hub Updater Software

Follow the directions in the dialog box.

Step 4B: Browse to the Sketch file and then select the file in the dialogue.

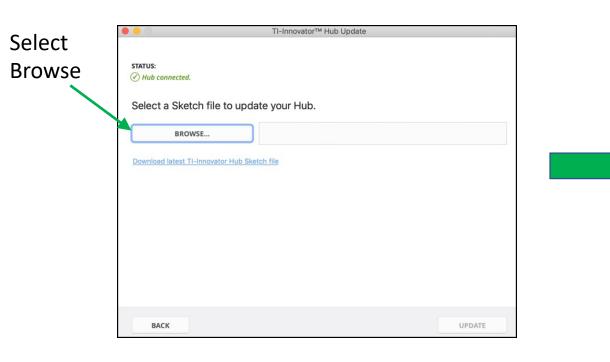

Click on the Sketch file < > ≡~ Ēt Downloads 0 Q Search Size Name **Date Modified** Kind Favorites a0179282 Sketch-1.5.0.49.hub Sketch file Today at 10:50 AM 4.6 MB Move_The_Cone_TI-Nspire (1) 2 Yesterday at 3:44 PM Folder P Documents Move_The_Cone_TI-Nspire (1).zip Yesterday at 3:43 PM 2.7 MB **ZIP** archive Desktop Drive the Line NspireCX.zip Running the Bases.tns 2020 Desktop... Coding Music Python Student 2 Jun 2, 2021 at 3:29 PM --Folder C Downloads Resources Coding Music Python 2 Jun 2, 2021 at 3:29 PM Folder Box Sync Coding the Sou...acher Version.tns Jun 2, 2021 at 3:16 PM 436 KB TI-Nspi...cument Coding the Sou...udent Version.tns Jun 2, 2021 at 3:14 PM Dropbox Coding Music Python Student Jun 2, 2021 at 11:48 AM Folder ---Recents 2.9 MB Applications Running the Bas...TI-Nspire (1).pdf Jun 1, 2021 at 3:46 PM Making_Music_...I-84_Plus_CE_.pdf Jun 1, 2021 at 3:01 PM 429 KB Pictures TI Drive 2021 Market En...Competitors.pptx May 30, 2021 at 11:09 AM DMS Spring 202...y_Raw Data.xlsx May 30, 2021 at 11:03 AM Cloud BTS 2020 Teach...y_Raw Data.xlsx May 30, 2021 at 10:26 AM Micros...k (.xlsx) C iCloud Drive DMS BTS 2020...ey_Raw Data.xlsx May 30, 2021 at 9:48 AM 1.3 MB Micros...k (.xlsx)

New Folder



Open

Cancel

Select Open

Step 4: Open the TI-Innovator Hub Updater Software

Follow the directions in the dialog box.

Step 4C: Update your TI-Innovator Hub with the selected Sketch file.



🗕 😑 🔿 🛛 TI-	Innovator™ Hub Update		• • 0	TI-Innovator™ Hub Update		
STATUS: <i>Hub connected.</i>		[]	STATUS:			
Select a Sketch file to update yo	ur Hub.	C	Select a Sketch file to update your Hub.			
BROWSE Sketch	BROWSE Sketch-1.5.0.49.hub		BROWSE			
Download latest TI-Innovator Hub Sketch file		Do not disconnect until the transfer is finished.				
			Hub successfully updated!			
				disconnect your Hub and update another.		
ВАСК	UPDATE		ВАСК		UPDATE	
	Select UPDATE		Connect another	Hub and select UPD	ATE or	

close the Updater application.