

TI-36X Solar, English

TI-36X SOLAR

Scientific Calculator

Basic Operations	2
Results	2
Basic Arithmetic	3
Percents	4
Fractions	5
Powers and Roots	6
Logarithmic Functions	6
Angle Units	7
DMS	8
Rectangular to Polar	9
Polar to Rectangular	9
Trigonometric Functions	10
Hyperbolic Functions	10
One-Variable Statistics	11
Two-Variable Statistics	13
Probability	15
Clearing and Correcting	16
Physical Constants	17
English/Metric Conversions	18
Constants (Repeated Operations)	19
Memory	20
Order of Operations	21
Number-System Modes	22
Boolean Logic Operations	24
Notation	25
Display Indicators	26
Error Conditions	27
In Case of Difficulty	28
TI Product, Service, and Warranty Information	29

© 1997 Texas Instruments Incorporated

Basic Operations

- To turn on the TI-36X Solar, expose the solar panel to light and press <u>AC/ON</u>. **Note:** Always press <u>AC/ON</u> to clear the calculator because memory and display may contain incorrect numbers.
- To turn off the TI-36X Solar, cover the solar panel with the slide case.

2nd selects the 2nd function of the next key pressed.

3rd selects the 3rd function of the next key pressed.



For example, $8 \ \boxed{3rd} \ [\sqrt[3]{x}]$ finds the cube root of 8.

To cancel 2nd or 3rd, press 2nd or 3rd again.

Results

The TI-36X Solar calculates up to 12 digits and can display up to 10 digits plus a minus sign (-9,999,999,999 through 9,999,999) and a 2-digit exponent. Results with more than 10 digits display in scientific notation.

Basic Arithmetic		
+ - × ÷	60 + 5 × 12 =	120.
	Completes all pending operation With constant, repeats the operation and value.	ons.
+/-	Changes sign of value just ento	5.
	In binary, octal, or hexadecima mode, [+/-] calculates the 2's complement of the number in t display.	
	Parenthetical expression (up to open for each pending operation closes all open parentheses	on).
3rd [π]	Pi is calculated with 12 digits (3.14159265359), displayed widigits (3.141592654).	th 10
	$2 \times [3rd][\pi] = 6.28318$	5307

Percents	
Percentage (5% of 250)	
250 × 5 3rd [%]	0.05
	12.5
Ratio (Ratio of 250 to 5)	
250 ÷ 5 (3rd) [%]	0.05
=	5000.
Add-On (5% add-on of 250)	
250 + 5 (3rd) [%]	12.5
	262.5
Discount (5% discount on 250)	
250 — 5 (3rd) [%]	12.5
	237.5

Fractions		
ba½ c	Enters a proper or imp $\mathbf{b/c}$ ($\mathbf{b} \le 6$ digits, $\mathbf{c} \le$ possible, improper fra displayed as mixed no	3 digits). When ctions are
	3 a 1/c 4 × 3 =	3
	Single-variable function decimal results.	ons display
a a 16 b a 16 c	Enters the mixed fract $(\mathbf{a}, \mathbf{b}, \mathbf{c} \le 3)$ digits each digits $(\mathbf{a}, \mathbf{b}, \mathbf{c} \le 3)$.	tion a b/c.
	6 a½ 4 a½ 6	6_4_6 6_2_3
2nd [d/c]	Toggles display betweenumber and improper	
	30 (ab/c) 4 (2nd) (d/c) (2nd) (d/c) (2nd) (d/c)	30_4 7_1_2 15_2 7_1_2
3rd [F◆D]	Toggles display betwee decimal. Note: Due to not all decimal number to fractions.	een fraction and display size,
	55 a½ 24 3rd [F◆D] 3rd [F◆D]	55

Powers and Roots		
8 1/x + 4 1/x =	0.375	
6 x ² + 2 =	38.	
256 \(\overline{x} \) + 4 \(\overline{x} \) =	18.	
8 3rd [³ √x] + 4 =	6.	
5 y ^x 3 =	125.	
8 2nd [¾y] 3 =	2.	
	8 [/x] + 4 [/x] = 6 [x²] + 2 = 256 [x] + 4 [x] = 8 [3rd] [³ [x] + 4 = 5 [y²] 3 =	

Logarithmic	Functions	
LOG	15.32 LOG	1.185258765
	+ 12.45 LOG =	2.280428117
2nd [10 ^x]	2 2nd [10x] - 10 x2 =	0.
LN	15.32 LN	2.729159164
	+ 12.45 LN =	5.250879787
2nd $[e^x]$.693 [2nd] $[e^x]$	1.999705661
	+ 1 =	2.999705661

(e=2.71828182846)

Angle Units			
2nd [DRG]	Cycles angle- degrees, radia affecting the	ans, and	grads without
3rd [DRG►]	Cycles (converts) angle-unit setting between degrees, radians, and grads for display, entry, and calculation.		
	45	DEG	45
	3rd [DRG▶]	RAD	0.785398163
	3rd [DRG▶]	GRAD	50.
	[3rd] [DRG▶]	DEG	45.

DMS

Enter DMS (Degrees/Minutes/Seconds) values as **D.MMSSs**, using 0s as necessary:

D degrees (0–7 digits)
. decimal-point separator
MM minutes (must be 2 digits)
SS seconds (must be 2 digits)
s fractional part of a second

For example, enter 48°5'3.5" as 48.05035.

Before using a DMS value in a calculation, you must convert it to decimal with 2nd [>DD].

[2nd] [►DD]	Interprets display as DM it to decimal.	S and converts
	30.09090 [2nd [►DD]	30.1525
3rd [►DMS]	Temporarily displays cur DMS.	rent value as
	30.1525 [3rd] [►DMS]	30°09'09"0

Rectangular to Polar

[3rd] [R►P] converts rectangular coordinates (x,y) to polar coordinates (r,θ) .

Convert rectangular coordinates (10,8) to polar.

AC/ON or 2nd [DRG] (if necessary)	DEG	
10 x=y 8	DEG	8
[3rd] [R▶P] (display r)	DEG r	12.80624847
$X \rightarrow Y$ (display θ)	DEG	38.65980825
X - Y (display r)	DEG r	12.80624847

Polar to Rectangular

[2nd] [P►R] converts polar coordinates (r,θ) to rectangular coordinates (x,y).

Convert polar coordinates (5,30) to rectangular.

AC/ON or 2nd [DRG] (if necessary)	DEG	
5 [X-y] 30	DEG	30
2nd [P►R] (display x)	DEG x	4.330127019
X - y (display y)	DEG	2.5
$X \rightarrow Y$ (display x)	DEG x	4.330127019

Trigonometric Functions

Before using the trigonometric functions (\overline{SIN} , \overline{COS} , \overline{TAN} , $\overline{[2nd]}$ $\overline{[SIN-1]}$, $\overline{[2nd]}$ $\overline{[COS-1]}$, $\overline{[2nd]}$ $\overline{[TAN-1]}$), select **DEG**, **RAD**, Or **GRAD** with $\overline{[2nd]}$ $\overline{[DRG]}$.

2nd [DRG] (if necessary)	DEG	
90 SIN	DEG	1.
- 30 COS	DEG	0.866025404
=	DEG	0.133974596
1 [2nd] [SIN-1]	DEG	90.
- .5 =	DEG	89.5

Note: Before using a DMS (Degree/Minute/Second) value in a calculation, you must convert it to decimal with [2nd] [▶DD].

Hyperbolic Functions

To access hyperbolic functions, press $\boxed{\text{HYP}}$ and then the function ($\boxed{\text{HYP}}$ $\boxed{\text{SIN}}$, $\boxed{\text{HYP}}$ $\boxed{\text{COS}}$, $\boxed{\text{HYP}}$ $\boxed{\text{TAN}}$, $\boxed{\text{HYP}}$ $\boxed{\text{2nd}}$ $\boxed{\text{SIN-1}}$, $\boxed{\text{HYP}}$ $\boxed{\text{2nd}}$ $\boxed{\text{COS-1}}$, $\boxed{\text{HYP}}$ $\boxed{\text{2nd}}$ $\boxed{\text{TAN-1}}$).

Note: DEG, RAD, or GRAD does not affect hyperbolic calculations.

5 HYP SIN	74.20321058
+ 2 =	76.20321058
5 (HYP) (2nd) [SIN-1]	2.312438341
+ 2=	4.312438341

One-Variab	le Statistics
3rd [STAT 1]	One-variable statistics mode.
2nd [CSR]	Clears all statistical data.
AC/ON	Clears all statistical data, STAT mode, and memory.
Σ+	Enters data point.
2nd [Σ-]	Removes data point.
2nd [FRQ]	Adds or removes multiple occurrences of a data point.
	Enter data point, press $[2nd]$ [FR0], enter frequency (1–99), press $[\Sigma+]$ to add or $[2nd]$ [$\Sigma-]$ to remove data points.
2nd [Σx]	Sum.
2nd $[\Sigma x^2]$	Sum of squares.
2nd [x]	Mean.
2nd [σxn]	Population standard deviation (<i>n</i> weighting).
2nd [σxn-1]	Sample standard deviation (<i>n</i> –1 weighting).
2nd [n]	Number of data points.

In STAT mode press \equiv to perform basic arithmetic, permutations, combinations, and polar/rectangular conversions.

Find the sum, mean, population standard deviation, and sample standard deviation for the data set: 45, 55, 55, 55, 60, 80. The last data point is erroneously entered as 8, removed with [2nd] $[\Sigma-]$, and then correctly entered as 80.

т 0.
т 0.
т 1.
т 4.
т 5.
т 6.
т 5.
т 6.
т 350.
т 58.33333333
т 21100.
т 10.67187373
т 11.69045194
ľ

Two-Variable	e Statistics
3rd [STAT 2]	Two-variable statistics mode.
2nd [CSR]	Clears all statistical data.
(AC/ON)	Clears all statistical data, STAT mode, and memory.
x [X*] y [S+]	Enters data point.
$x \times y y$ 2nd $\Sigma - 1$	Removes data point.
2nd [FRQ]	Adds or removes multiple occurrences of a data point.
	Enter data point, press $[2nd]$ [FR0], enter frequency (1–99), press $[\Sigma+]$ to add or $[2nd]$ $[\Sigma-]$ to remove data points.
$2nd [\Sigma x] or$ $2nd [\Sigma y]$	Sum.
$2nd$ $[\Sigma x^2]$ or $2nd$ $[\Sigma y^2]$	Sum of squares.
$2nd$ $[\bar{x}]$ or $2nd$ $[\bar{y}]$	Mean.
2nd [σxn] or 2nd [σyn]	Population standard deviation (<i>n</i> weighting).
2nd [σxn-1] or	
2nd [σyn-1]	(n-1 weighting).
[2nd] [n]	Number of data points.
2nd [Σxy]	Sum of the xy products.
3rd [COR]	Correlation coefficient.
2nd [ITC]	Intercept.
2nd [SLP]	Slope.
2nd [x']	Predicted x value.
2nd [y']	Predicted y value.

For trend-line analysis, enter 1st data point, and then enter just y values with $\Sigma +$. x is automatically incremented by 1.

Linear Regression Example


Predict y for x = 9, given (4,5), (4,5), (9,9), (2,3). Calculate correlation coefficient, slope, and intercept of the line, mean of x values, and mean of y values.

3rd [STAT 2]	STAT	0.
2nd [CSR]	STAT	0.
4 [FRQ] 2 [Σ+]	STAT	2.
9 X-y 9 Σ+	STAT	3.
2 X=y 3 Σ+	STAT	4.
9 $[y]$ (predict y for $x=9$)	STAT 9.0747663	55
3rd [COR] (correlation coefficient)	STAT 0.9980305	25
2nd [SLP] (slope)	STAT 0.8411214	95
2nd [ITC] (intercept)	STAT 1.5046728	97
$[2nd][\bar{x}]$ (mean of x values)	STAT 4	.75
$[2nd]$ $[\overline{y}]$ (mean of x values)	STAT	5.5
		_

Probability

A **combination** is an arrangement of objects in which order is not important, as in a hand of cards. [3rd] [nCr] calculates the number of possible combinations of n items taken r at a time.

Calculate the number of 5-card poker hands that can be dealt from a deck of 52 cards.

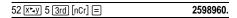

A **permutation** is an arrangement of objects in which the order is important, as in a race. 2nd nPr calculates the number of possible permutations of n items taken r at a time.

Calculate the number of possible permutations for the 1st-, 2nd-, and 3rd-place finishers (no ties) in an 8-horse race.



A **factorial** is the product of the positive integers from 1 to n. (n must be a positive whole number \leq 69.)

Using the digits 1, 3, 7, and 9 only one time each, how many 4-digit numbers can you form?



Clearing and Correcting		
[AC/ON]	Clears display, errors, all pending operations, statistical data, STAT mode and memory. Sets DEG angle units, floating-decimal format.	
CE/C	Clears value (before pressing operation key), display, errors, all pending operations. Does not affect mode, display format, angle units, memory, or statistical data.	
	©E/C after (,), y, 2nd (∜y), x, ; , +, or – clears the calculator as if you had pressed (€/C) (€/C).	
CE/C CE/C	Clears display and all pending operations.	
→	Deletes right-most character in display.	
0 STO n	Clears memory n .	
3rd [FL0]	Clears sci or ENG notation.	
2nd [FIX] .	Clears FIX notation.	
[2nd] [CSR]	Clears all statistical data.	

You can change from y^x , $\sqrt[4]{y}$, x, \div , \div , -, AND, OR, XOR, or XNOR to another operation simply by pressing the intended key if the intended operation has a lower priority.

Ph	Physical Constants			
С	speed of light	299,792,458 meters per second		
g	gravitational acceleration	9.80665 meters per second ²		
m _e	electron mass	9.1093897× 10 ⁻³¹ kilograms		
е	electron charge	1.60217733× 10 ⁻¹⁹ coulombs		
h	Planck's constant	6.6260755× 10 ⁻³⁴ Joule seconds		
N _A	Avogadro's number	6.0221367×10^{23} molecules per mole		
R	ideal gas constant	8.31451 Joules per mole °Kelvin		
G	universal gravitation	6.67259 × 10 ⁻¹¹ Newton meters ² per kilogram ²		
_		14 4 4 4		

Press [3rd] [CONST] and then the appropriate constant key.

Calculate 3 times the speed of light:

3 × 3rd [CONST] [C] = 899377374.

English/Metric Conversions

English/metric conversions are available only in DEC.

cm ÷ 2.54
in × 2.54
l ÷ 3.785411784
gal × 3.785411784
kg ÷ .45359237
lb ×.45359237
°C × 9/5 + 32
(°F - 32) × 5/9
g ÷ 28.349523125
oz × 28.349523125

Convert 300 grams to ounces.

300 [2nd] [►oz]	10.58218858

Constants (Repeated Operations)

A constant contains an operation $(+,-,\times,\div,y^X,\sqrt[X]{y},$ AND, OR, XOR, or XNOR) and a value. \equiv repeats the calculation. $\boxed{AC/ON}$, $\boxed{CE/C}$ $\boxed{CE/C}$, or a pending operation key clears the constant.

Calculate $2 \times \pi$, $4 \times \pi$, and $8 \times \pi$.

2 × (3rd [π] =	6.283185307
4 =	12.56637061
8 =	25.13274123

Memory

The TI–36X Solar has 3 memories. When a memory contains a number other than 0, \mathbf{M} displays. To clear a single memory, press 0 $\boxed{\text{STO}}$ 1, 0 $\boxed{\text{STO}}$ 2, or 0 $\boxed{\text{STO}}$ 3. $\boxed{\text{AC/ON}}$ clears all three memories.

STO n	Stores displayed value in memory n , replacing current value.		
	23 STO 1	М	23.
	+ 2=	M	25.
RCL n	Recalls value in memory n .		
	(continued) RCL 1	М	23.
	+ 3 =	M	26.
[2 nd] [SUM] n	Adds displayed value to memory n .		
	(continued) 4 [2nd] [SUM] 1	М	4.
	RCL 1	М	27.
$\begin{cases} \begin{cases} $	Exchanges displayed values.	ayed and m	emory
	(continued)		45
	3 × 5 ≡	М	15.
	3rd [EXC] 1	М	27.
	3rd [EXC] 1	M	15.

Order of Operations		
Expressions inside parentheses.		
Trigonometric, hyperbolic, square, square root, cube root, factorial, reciprocal, angle conversion, combinations, permutations, percent, logarithms, change sign, metric conversions, logical NOT.		
Universal powers and roots.		
Multiplication and division.		
Addition and subtraction.		
Logical AND.		
Logical OR, XOR, XNOR.		
completes all operations.		

The TI–36X Solar uses the Algebraic Operating System (AOS $^{\text{TM}}$). It stores up to 4 pending operations (1 if stat is displayed).

Number-System Modes

[3rd] [DEC] Selects decimal mode.

[3rd] [BIN] Selects binary (BIN) mode and converts the integer portion of the displayed number. You can enter positive binary numbers as large as 111111111 (9 digits). Numbers beyond this are interpreted as negative (2's complement) numbers.

3rd [OCT] Selects octal (oct) mode and converts the integer portion of the displayed number. You can enter positive octal numbers as large as 377777777. Numbers beyond this are interpreted as negative (2's complement) numbers.


3rd [HEX] Selects hexadecimal (DEC) mode and converts the integer portion of the displayed number. You can enter positive hexadecimal numbers as large as 2540BE3FF. Numbers from FDABF41C01 through FFFFFFFF are interpreted as negative (2's complement) numbers.

Note: Hexadecimal numbers between 2540BE3FF and FDABF41C01 are equivalent to decimal values that are outside the range of the calculator and therefore cause an error.

Calculate 16+1 and display in each number mode.

16 + 1 =		17.
3rd [BIN]	BIN	10001
3rd [OCT]	ОСТ	21
3rd [HEX]	HEX	11
3rd [DEC]		17.

To enter the hexadecimal digits A through F, use the keys shown below.

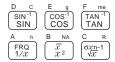

B and D are shown as uppercase letters on the keyboard, but displayed as lowercase **b** and **d**. If you enter ABCD, for example, the display shows **AbCd**.

To display the 2's complement of the number in the display, press +/-.

Boolean Logic Operations

You can perform logical AND, OR, XOR, XNOR, and NOT operations in the decimal, binary, octal, and hexadecimal modes.

Except for NOT, these functions compare the corresponding bits of two values. The result is displayed in the current number base.

Note: Although the TI-36X Solar does not display leading zeros for integers, logical operations treat each value as a 10-digit binary number. (A displayed value of 0, for example, is treated as 000000000 BIN, and a displayed value of 1 is treated as 0000000001 BIN.) Keep this in mind if you see unexpected results.

AND	0 AND 0 = 0	0 AND 1 = 0	1 AND 1 = 1
OR	0 OR 0 = 0	0 OR 1 = 1	1 OR 1 = 1
XOR	0 XOR 0 = 0	0 XOR 1 = 1	1 XOR 1 = 0
XNOR	0 XNOR 0 = 1	0 XNOR 1 = 0	1 XNOR 1 = 1
NOT	NOT 0 = 1	NOT 1 = 0	

What is the binary result of 9 FHEX XOR 01HEX?

3rd [HEX]	HEX	0
9F 3rd [XOR] 1 =	HEX	9E
[3rd] [BIN]	BIN	10011110

Notation		
3rd [SCI]	Selects scientific notation.	
	12345 =	12345.
	3rd [SCI]	1.2345 ⁰⁴
3rd [ENG]	Selects engineering notation is a multiple of 3). (continued) [3rd] [ENG]	(exponent 12.345 03
3rd [FLO]	Restores standard notation (floating-decimal) format.	
2nd [FIX] n	Sets decimal places to n (0-retaining notation format. $(continued)$,.
	2nd [FIX] 2 =	12.35 ⁰³
	2nd [FIX] 4 =	12.3450 ⁰³
2nd [FIX] .	Removes fixed-decimal setting.	
EE	Enters exponent.	

You can enter a value in floating-decimal, fixed-decimal, or scientific notation, regardless of display format. Display format affects only results.

To enter a number in scientific notation:

- 1. Enter up to 10 digits for base (mantissa). If negative, press +/- after entering the mantissa.
- 2. Press EE.
- 3. Enter 1 or 2 digit exponent. If negative, press +/- either before or after entering exponent.

1.2345 	-1.2345 -65

Display Indicators		
2nd	Calculator will access 2nd function (printed on top half of key) of next key pressed.	
3rd	Calculator will access 3rd function (printed above key) of next key pressed.	
М	Value other than 0 in memory.	
НҮР	Calculator will access hyperbolic function of next key pressed.	
BIN, OCT, OF HEX	Calculator is in binary, octal, or hexadecimal number mode.	
STAT	Calculator is in 1-variable or 2-variable statistics mode.	
DEG, RAD, OI GRAD	r Specifies angle-unit setting (degrees, radians, or grads). When you turn on the calculator, angle units are degrees.	
х	x-coordinate of polar to rectangular conversion.	
r	<i>r</i> -coordinate of rectangular to polar conversion.	
()	1 or more open parentheses.	

Error Conditions

When **Error** appears in the display, the calculator will not accept a keyboard entry until you press <u>CE/C</u> to clear the error condition. (<u>CE/C</u>) <u>CE/C</u> clears the condition and all pending operations.)

General errors

- Result larger than ±9.999999999 × 10⁹⁹.
- · Division by zero.
- More than 15 open parentheses or 4 pending operations (1 in STAT).
- Log, In, or 1/x of 0.
- Log, In, or \sqrt{x} of x < 0.
- · Even root of a negative number.
- 0 to the 0th power, or 0th root of any number.
- Rectangular to polar when x or y has an exponent > 63.
- Tan of $x = 90^{\circ}$, -90° , 270° , -270° , 450° , etc.
- Sin⁻¹ or \cos^{-1} of x where |x| > 1.
- Tanh⁻¹ of x where $|x| \ge 1$.
- x! where x is not a positive integer ≤ 69.
- Combinations or permutations when n and r are not positive integers.

Statistical errors

- Data value x such that $|x| \ge 1 \times 1.0$ E64.
- Removing the only data value with [2nd] [Σ-].
- x̄, ȳ, σxn, σyn, σxn-1, σyn-1, correlation, intercept, slope, x', or y' with no data values or σxn-1 with one data value.
- Correlation, intercept, slope, x', or y' of a vertical line.
- Correlation or x' of a horizontal line.
- Correlation, slope, intercept, x', or y' with only one data point.

Number mode errors

- · Result outside range for that number mode.
- Selecting BIN, OCT, or HEX when displayed number is outside range for that number mode.

In Case of Difficulty

- If the display is blank, expose the solar panel to adequate light. Press [AC/ON] and try again.
- Review the operating instructions.

TI Product, Service, and Warranty Information

TI Product and Services Information

For more information about TI products and services, contact TI by e-mail or visit the TI calculator home page on the world-wide web.

e-mail address: ti-cares@ti.com

internet address: http://www.ti.com/calc

Service and Warranty Information

For information about the length and terms of the warranty or about product service, refer to the warranty statement enclosed with this product or contact your local Texas Instruments retailer/distributor.